



Title: Stand Alone Receiver- Programming Remote

Each standard receiver can be configured to accept codes from ten separate handset units

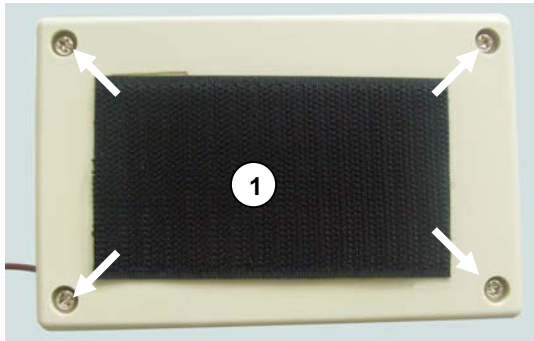

1. Carefully open the cover by removing the four screws located on back of the stand alone receiver.

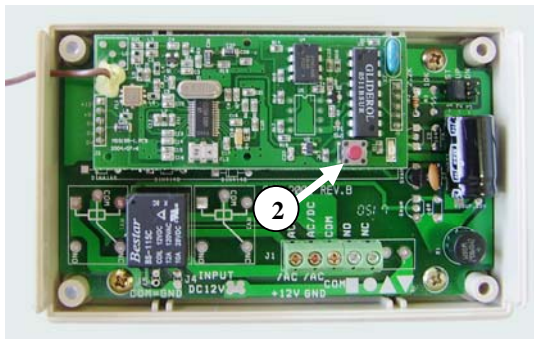

2. Press the receiver button once which is located on the receiver board (small board having antenna wire in it)
 - A red light will illuminate



3. Press large button on the handset once and hold until red-light on receiver board turns off
 - This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)

Note: To reset the receiver press and hold the receiver button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a handset has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.