


HOW TO PROGRAMME A BOL6 GARAGE DOOR OPENER

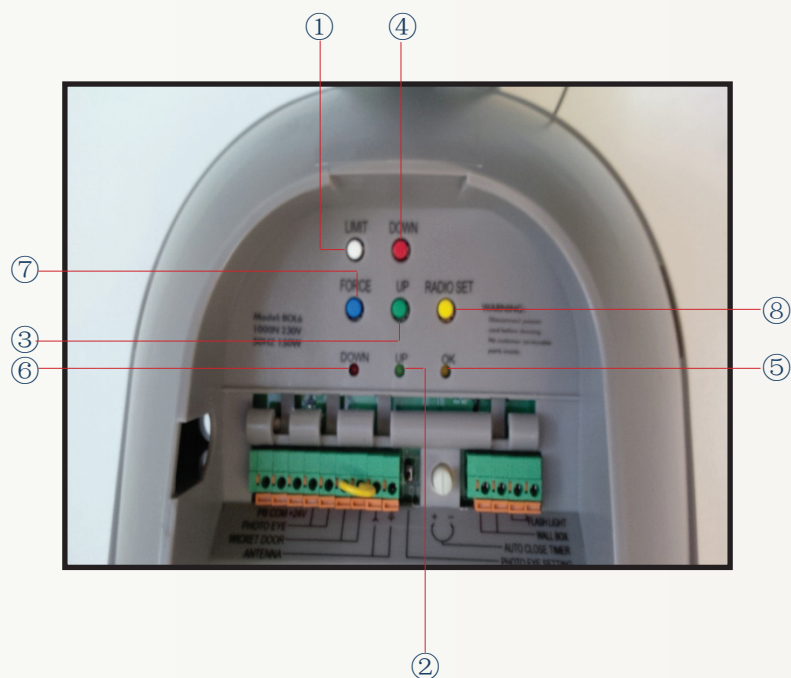

- Limit Setting – starting with the door in the closed position, press the white “LIMIT” button^① once and the “UP” LED^② will come on. Drive the unit to the desired open position by holding the green “UP” button^③ continuously and release this button once you have reached the open position. The unit may be fine tuned by using the red “DOWN” button^④. Once you are happy with the open position, press the white “LIMIT” button^① once to accept the open position. The “OK” LED^⑤ flashes and goes out indicating the unit has accepted the open limit setting.
- To set the close limit, press the white “LIMIT” button^① twice and the “DOWN” LED^⑥ will come on. Drive the unit to the close position by holding the red “DOWN” button^④ continuously and release this button once you have reached the closed position. The unit may be fine tuned by using the green “UP” button^③. Once you are happy with the closed position, press the white “LIMIT” button^① once to accept the closed position. The “OK” LED^⑤ flashes and goes out indicating the unit has accepted the closed limit setting.
- The force mode now needs to be set and this is done by pushing the blue “FORCE” button^⑦ once. The unit will drive to the open position and stop for 2 seconds and then drive back to the close position automatically. The unit will then beep 3 times once reaching the closed position indicating that the force/sensitivity is now set.
- To program the remote to this unit, press the yellow “RADIO SET” button^⑧ once for approximately 1-2 seconds and the unit will beep. Then press the desired button^⑨ on your remote for approximately 1-2 seconds and the unit will beep again, indicating you have successfully coded your remote.

