

HOW TO PROGRAMME A MARANTEC (COMFORT 270/280) OPENER

Express Programming

1. Programming the "OPEN" door position

The control system is in operating mode.

P P > 3 sec. < 10 sec.:
Start express programming

+ Drive the door to the OPEN position.


P Save the OPEN position.


2. Programming the "CLOSED" door position

- Drive the door to the CLOSED position.

P Save the CLOSED position.


3. Programming the remote control

 Press the hand transmitter button.

 Release the hand transmitter button.

P Save the remote control setting.
End express programming.

The control system is in operating mode.

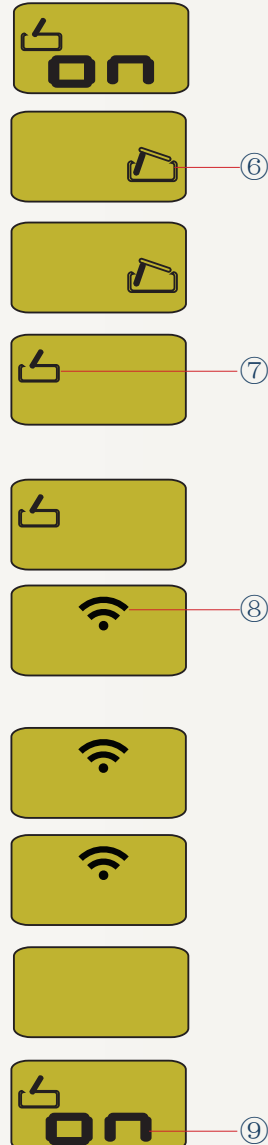

- Press and hold the "**P**" button^① for approximately 3-5 seconds. The **LED screen**^② will count up and release the "**P**" button^① at 4 when the **open door icon**^⑥ appears (see left).
- Press and hold the "**+**" button^③ to drive the unit to the open position. If required adjust the position using the "**-**" button^④ and "**+**" button^③.
- Save the open position by pressing the "**P**" button^① for 1 second. The **closed icon**^⑦ will appear (see left).
- Now press and hold the "**-**" button^④ and the garage door will drive to the closed position. If required adjust the position using the "**-**" button^④ and "**+**" button^③.
- Press the "**P**" button^① for 1 second to save the closed position. Now the **transmitter learn icon**^⑧ will appear (see left).
- Press the **desired button**^⑤ on the remote to learn the remote to the unit.
- Release the **remote button**^⑤.
- Press the "**P**" button^① for approximately 1 second to save the settings and exit programming.
- Once exiting program mode, the unit will return to **standby mode**^⑨ (see left).

