

HOW TO PROGRAMME A SR60 ROLLER DOOR OPENER



Setting the Limits of the SR60 Roller Door Opener

1. When standing on the inside of the garage looking out note the side of the roller door the unit is mounted on.
2. If mounted on the right hand side proceed to step 4.
3. If mounted on the left hand side remove the **motor direction jumper**^①
4. Place the door in the half open position and re-engage the motor unit.
5. Press and release the **limit button**^② and the **orange LED**^③ will start flashing.
6. Press the **limit button**^② to drive the door to the open position, release when at the top.
7. Press and release the **green button**^④ to save and immediately press and release the **purple learn button**^⑤.
8. Press the **purple learn button**^⑤ and drive the door to its bottom limit.
9. Press the **green button**^④ to save.
10. The door will open to top limit press **green button**^④ to save.
11. The door will close to bottom limit press **green button**^④ to save.
12. The **orange LED**^③ will go out.
13. Proceed to setting the units force.

Setting the Force of the SR60 Roller Door Opener

- Door must be in the down position.
- Press and release the **purple learn button**^⑤ twice.
- The **orange LED**^③ will flash quickly.
- Press the **green button**^④ the door will open.
- When fully open press the **green button**^④ and the door will close.
- The **orange LED**^③ will go out.
- Force learnt and setup complete.