



INSTRUCTIONS FOR CODING HT42 & HT43 HANDSET

HT42

RED BUTTON IS PRE CODED

BLUE BUTTON IS CODED BY THE DIPSWITCHES INSIDE

TO USE ON COMMON ENTRY SET THE INTERNAL DIP SWITCHES
OF EVERY HANDSET TO THE SAME SETTINGS

TO PROGRAMME HANDSET C

CODE THE BLUE BUTTON FROM ONE HANDSET INTO
RECEIVER

ALL HANDSETS SHOULD BE SET THE SAME AND 1 HANDSET
ONLY NEEDED TO BE CODED

HT43

HAS THREE WHITE BUTTONS ALL WHITE WITH THE THIRD
BUTTON IS SET BY INTERNAL DIPSWITCHES INSIDE
TOP TWO BUTTONS ARE PRE SET CODES

TO CODE HANDSET PRESS & RELEASE BUTTON ON RECEIVER
THEN RED LED COMES ON THEN PRESS BUTTON ON HANDSET
THEN RED LED GOES OUT