 

 

 


 


This procedure is used to code additional transmitters using the MASTER transmitter. If a MASTER transmitter has not yet been coded please refer to back page or *Express Programming Instructions*.

### Programming additional transmitters

<b>1</b>	Connect the MASTER (grey) transmitter and the new transmitter together using the coding connector	
<b>2</b>	Press and hold the button on the MASTER transmitter <i>The LED on the MASTER transmitter will light up</i>	
<b>3</b>	Press and hold the button on the new transmitter <i>The LED on the new transmitter will flash</i>	
<b>4</b>	<i>The LED on the new transmitter will light up</i> <i>The programming procedure is now complete</i> Remove the coding connector and set aside for future use	

### Resetting transmitter codes

<b>1</b>	Plug the coding connector into the transmitter	
<b>2</b>	Short circuit one of the two outer pins with the centre pin using a screwdriver	
<b>3</b>	Press the button on the transmitter <i>The LED flashes and then lights up</i> Repeat with any button that requires resetting	
<b>4</b>	The coding procedure is complete The transmitter will no longer operate the opener	

- ❖ After the hand transmitter has been re-coded, the operator system must also be re-programmed to respond to the new code. Refer to *Express Programming Instructions*.
- ❖ To delete handset codes from the opener, refer to *Resetting Operator System*.

This procedure is used to code transmitters to the opener if you do not have a MASTER transmitter that is already coded. If the opener has not yet been programmed for operation (open & close limits set) please refer to *Express Programming Instructions*.

### Programming a MASTER transmitter

1		The opener must be switched on		<i>Solid ON icon displayed</i>
2		Hold the P button for 3 to 10 seconds		<i>Counter will flash</i>
3		Press and release the P button		<i>Icon will flash</i>
4		Press and release the P button		<i>WIFI icon will flash</i>
5		Press the transmitter button		<i>Solid WIFI icon displayed</i>
6		Release the transmitter button		<i>WIFI icon will flash</i>
7		Press and release P button to save and end programming		<i>Solid ON icon displayed</i>

- ❖ Only one remote control transmitter can be programmed using the above procedure. Refer overleaf for programming additional transmitters using a MASTER transmitter.
- ❖ To delete handset codes from the opener, refer to *Resetting Operator System*.