


8-16. INITIAL SYSTEM SET UP (cont'd)

<p>Power on</p>	1	<p>Press and hold for 2s<10s</p>	<p>Start initial system setup by programming the door OPEN position.</p>	
	2		<p>Bring the door to the desired OPEN position</p>	
	3		<p>Fine adjustment if necessary. Adjust the OPEN door position using (+) and (-)</p>	
	4	<p>Press once</p>	<p>Saves the OPEN door position. Start programming the CLOSED door position.</p>	
	5		<p>Bring the door to the desired CLOSED position</p>	
	6		<p>Fine adjustment if necessary. Adjust the CLOSED door position using (+) and (-)</p>	
	7	<p>Press once</p>	<p>Saves the CLOSED door position. Program the transmitter code to GDO</p>	
	8		<p>Press the transmitter button. LED #7 flashes rapidly</p>	
	9		<p>Release the transmitter button</p>	
	10	<p>Press once</p>	<p>Saves the transmitter code settings. End the system setup (programming) procedure</p> <p>IMPORTANT: SEE NOTE BELOW</p>	

Operating mode

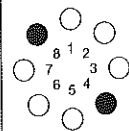

IMPORTANT:

Upon completion of the initial set up, the operator must be cycled for two complete cycles (complete cycle comprises of one uninterrupted up activation of the system and one uninterrupted down activation of the system).

Legend:

LED off	
LED on	
LED flashes slowly	
LED pulses	
LED flashes quickly	
Factory default setting	
Not possible	-