


# HOW TO PROGRAMME A BRD11 ROLLER DOOR OPENER

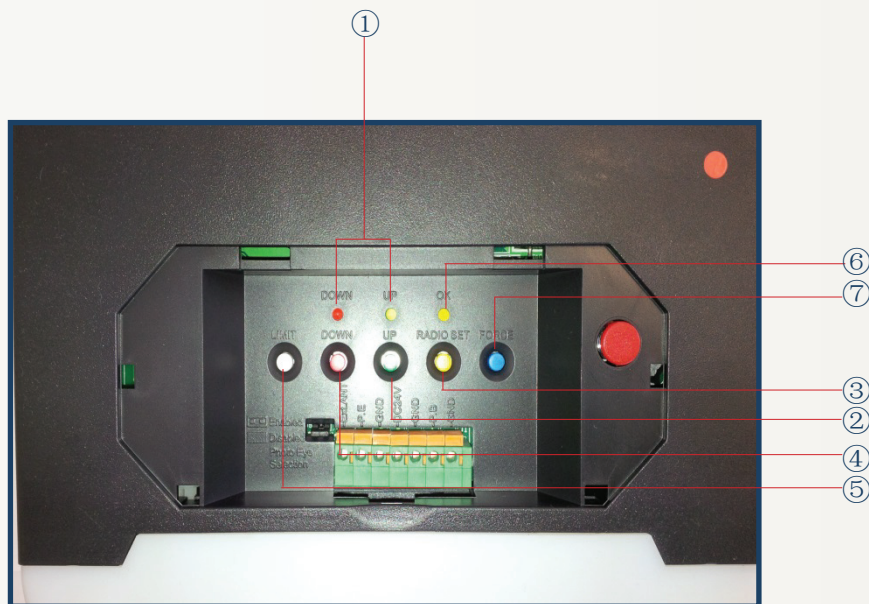

- Setting the Direction – when the power comes on both the “UP & DOWN” LEDs<sup>①</sup> will come on. At this point we need to set the direction of the unit. If the unit is on the right hand side of the door (viewed from inside the garage looking out), press the “DOWN” button<sup>④</sup> once followed by the “RADIO SET” button<sup>③</sup>. The unit will beep twice to indicate the direction is set. If the unit is on the left hand side of the door (viewed from inside the garage looking out), press the “UP” button<sup>②</sup> once followed by the “RADIO SET” button<sup>③</sup>. The unit will beep twice to indicate the direction is set.
- Limit setting – starting with the garage door in the closed position, press the “Limit” button<sup>⑤</sup> once and the “UP” LED<sup>①</sup> will come on. Drive the unit to the desired open position by holding the “UP” button<sup>②</sup> continuously and release this button once you have reached the open position. The unit may be fine tuned by using the “DOWN” button<sup>④</sup>. Once you are happy with the open position, press the “Limit” button<sup>⑤</sup> once to accept the open position. The “OK” LED<sup>③</sup> flashes and goes out indicating the unit has accepted the open limit setting.
- To set the close limit, press the “Limit” button<sup>⑤</sup> twice and the “DOWN” LED<sup>①</sup> will come on. Drive the unit to the close position by holding the “DOWN” button<sup>④</sup> continuously and release this button once you have reached the closed position. The unit may be fine tuned by using the “UP” button<sup>②</sup>. Once you are happy with the closed position, press the “Limit” button<sup>⑤</sup> once to accept the closed position. The “OK” LED<sup>③</sup> flashes and goes out indicating the unit has accepted the closed limit setting.
- The force mode now needs to be set and this is done by pushing the “FORCE” button<sup>⑦</sup> once. The unit will drive to the open position and stop for 2 seconds and then drive back to the close position automatically. The unit will then beep 3 times once reaching the closed position indicating that the force/sensitivity is now set.
- To program the remote to this unit, press the yellow “RADIO SET” button<sup>④</sup> once for approximately 1-2 seconds and the unit will beep. Then press the desired button<sup>⑧</sup> on your remote for approximately 1-2 seconds and the unit will beep again, indicating you have successfully coded your remote.