
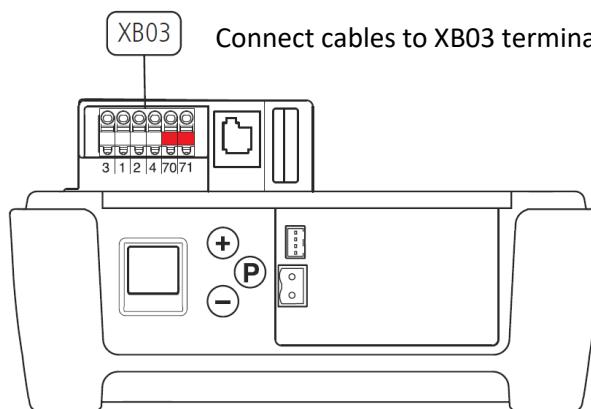


Installing Photo Electric Safety Beams

Marantec Comfort 270/280/380 Openers

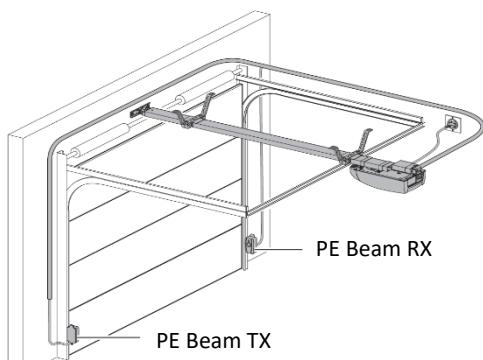

Programming PE Beams

	The opener must be switched on		Solid ON icon displayed								
	Hold the P button for at least 10 seconds		Counter flashes & menu displayed								
	Select <u>Level 8</u> using the + and - buttons <i>This Level is for System Settings</i>		Level value displayed								
	Press and release the P button to confirm the level		Parameter value displayed								
	Select <u>Menu 1</u> using the + and - buttons <i>This is the Photocell Menu</i>		Parameter value displayed								
	Press and release the P button to confirm the menu		Parameter value will flash								
	Select <u>Parameter</u> as per the table below: <table border="1"> <tr> <th>Parameter</th> <th>Door Operations</th> </tr> <tr> <td>1</td> <td>Operation without photo beams</td> </tr> <tr> <td>2</td> <td>Two-wire photo beams</td> </tr> <tr> <td>3</td> <td>External photo beams</td> </tr> </table> <i>(Example used – Two-wire photo beams)</i>	Parameter	Door Operations	1	Operation without photo beams	2	Two-wire photo beams	3	External photo beams		Parameter value will flash
Parameter	Door Operations										
1	Operation without photo beams										
2	Two-wire photo beams										
3	External photo beams										
	Press and release the P button to confirm the parameter		Menu 8 will be displayed								
	Hold the P button for at least 5 seconds to exit menu <i>Programming complete</i>		Solid ON icon displayed								